

Blinds Co

HAND-MADE BLINDS

How to Measure

Please Note: We recommend you measure the top, middle and bottom of your window, whether exact or recess.


This will give you a better idea of your windows dimensions.

Always take the smallest measurement.

Never assume the measurements will be the same for all of your windows!

Every window is different!

Exact Size

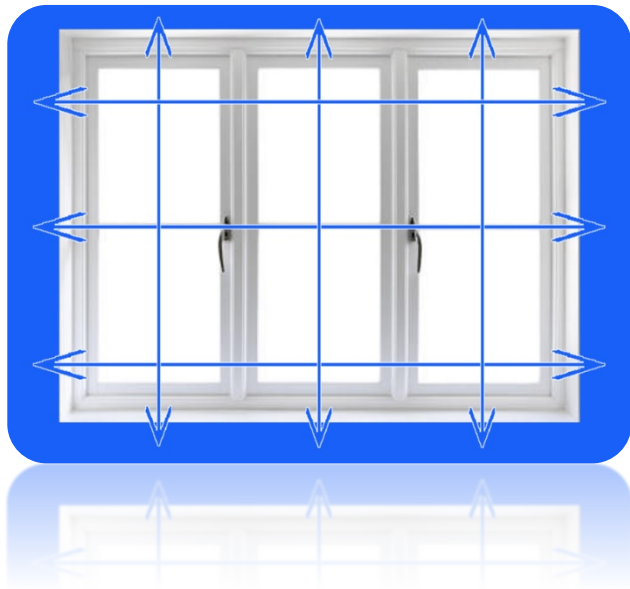

Exact fitting blinds will typically hang outside of the windows recess.


*If you choose to measure exact blind size you will need to decide by how much you would like your blind to **overlap** the recess, and provide those exact measurements of the width and the drop.*

Blinds of this nature are made to your exact requirements, so it is important to be sure of the measurements you provide. We will not make any allowances.

Blinds Co

HAND-MADE BLINDS

Recess Size

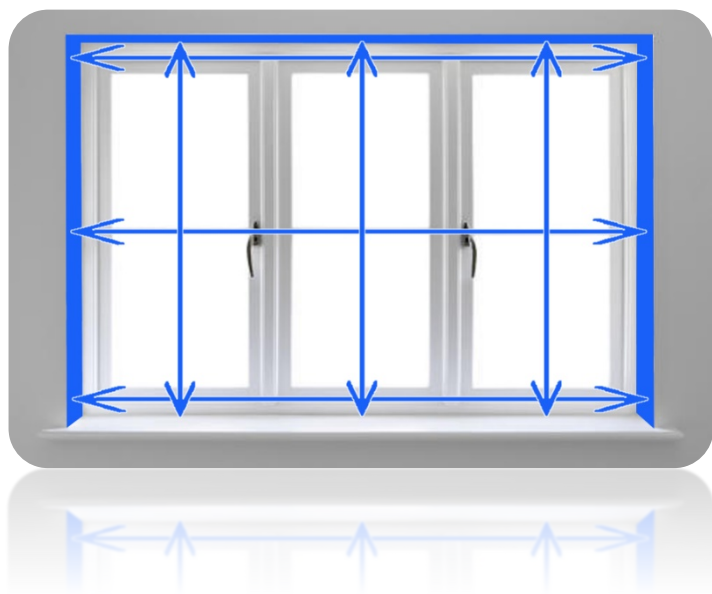

Recess fitting blinds will hang on the inside of your recess.

To achieve this look you will need to measure the width and drop, from wall to wall, on the inside of the recess.

When measuring please take extra care to note any obstructions that may cause an issue when you come to fitting your blind. Obstructions such as window handles, skirting boards, dado rails and tiles are just a few example of what to look out for which may alter the way you measure.

Please note: when ordering recess for any blind type we will make a deduction of 10mm from the width **and the drop*

Blinds Co

HAND-MADE BLINDS

Roller Blinds

When measuring for a roller blind there are 3 measuring options: Exact, Recess and Cloth size.

Exact: Choose this option if fitting outside the window recess. The measurement you provide will be for the entire blind including the mechanisms and the brackets. The fabric will be 35mm less in the width. Please ensure measurements allow for an overlap of the opening.

Recess: Choose this option if fitting inside the window recess. The required deductions will be made to ensure the blind fits perfectly within the recess. The measurements you provide for the width will be from bracket to bracket and the fabric will be 35mm less.

Cloth: Choose this option if the measurements you have are for the fabric/material. The overall blind size will be 35mm wider once the mechanism and brackets have been installed.



Blinds Co

HAND-MADE BLINDS

Perfect Fit – Glass Size

Before ordering Perfect Fit blinds, you should check a few things first. Make sure there is 25mm of clearance from the window beading to any obstruction such as handles or vents. Next check the depth of the window from the glass to the frame. To do this, place a credit card onto the glass along its thin edge and measure the depth to the frame with a metal tape measure. The depth should be between 18-30mm. If your depth is outside of this range, please contact us to discuss further options.

When ordering perfect fit blinds it is the size of the visible glass that must be measured. Measurement must not include the rubber bead or any seals.

